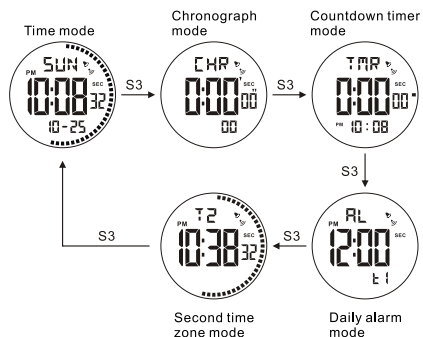# NOWLEY

INSTRUCTION MANUAL 86238

Features

1. 13 digits display: Hour, Minute Second, Month, date, Day of week
2. Auto calendar from 2015 to 2065
3. Chronograph with 1/100 second
4. daily alarm and hourly chime
5. Dual time zone
6. Count down timer with maximum of 23 hours 59mins and 59secs
7. 12 /24 hour format
8. animation dots second display
9. EL back
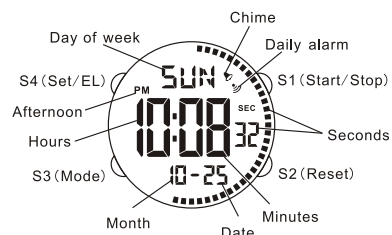
Mode Transition Diagram

If the watch is not under time mode, the display will return to time mode when button S3 is pressed after press either button S1 or S2.
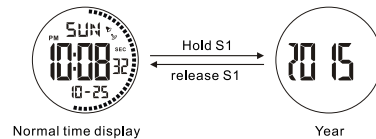
CARE OF YOUR WATCH

1. This watch contains electronic components. Never attempt to open the case or remove the back cover.
2. Do not operate push buttons below the surface of the water while swimming or diving.
3. Should water or condensation appear in the watch, have the watch checked immediately. Corrosion of electronic parts can occur inside the case.
4. Avoid severe impact. The watch is designed to withstand impact under normal use. It is inadvisable to subject it to severe impact or rough usage.
5. Avoid exposing the watch to extreme temperature.
6. Clean the watch with soft cloth and clean water only. Avoid using chemicals.
7. Keep your watch away from the conditions of strong electric field and static electricity.
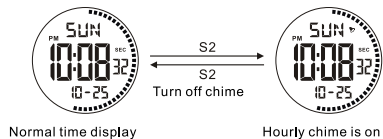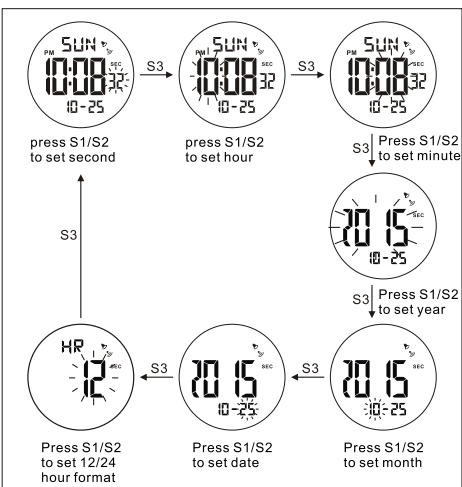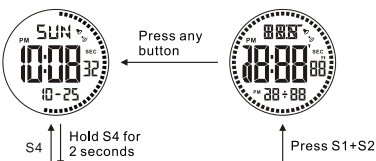
Lcd Display And Buttons Function

Day of week, Chime, Daily alarm, S4 (Set/EL), S1 (Start/Stop), Afternoon, Hours, Seconds, S3 (Mode), S2 (Reset), Month, Date, Minutes

Time Mode

1. How to set year

Normal time display — Hold S1 / release S1 — Year

2. How to set hourly chime

Normal time display — S2 / S2 Turn off chime — Hourly chime is on

3. How to set the time and calendar

Press any button — Hold S4 for 2 seconds — Press S1+S2

press S1/S2 to set second
press S1/S2 to set hour
Press S1/S2 to set minute
Press S1/S2 to set year
Press S1/S2 to set month
Press S1/S2 to set date
Press S1/S2 to set 12/24 hour format

Press S4 to exist the time setting mode

Chronograph Mode

How to Use chronograph

First Row: Chrono mode
Second Row: hour min sec
Third Row: 1/100 sec

Time mode — Chronograph mode — Start — Stop — press S2 to Lap — Stop — display Lap time — Clear
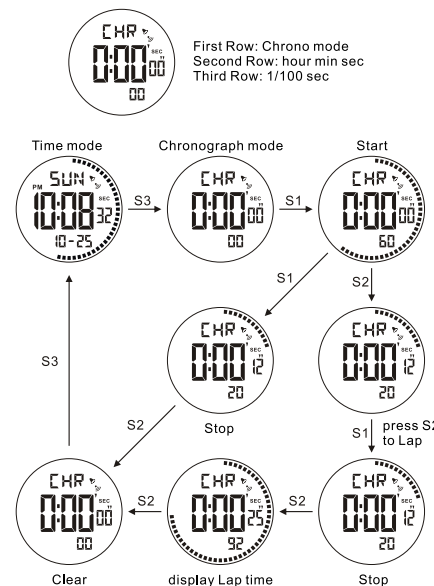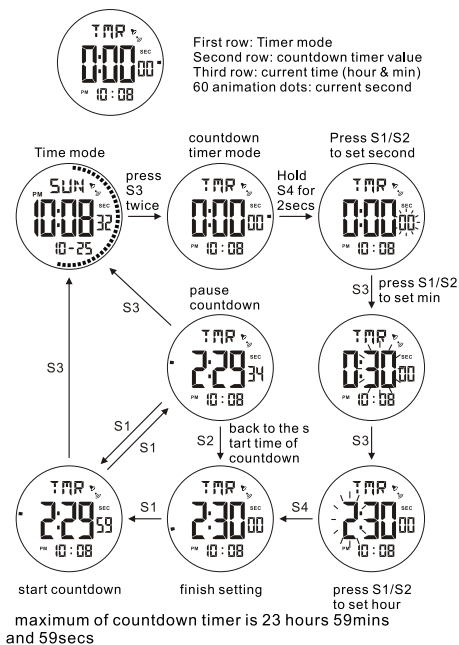
Maximum of chronograph is 23 hours 59mins 59secs and 99/100sec and automatic cycle timer
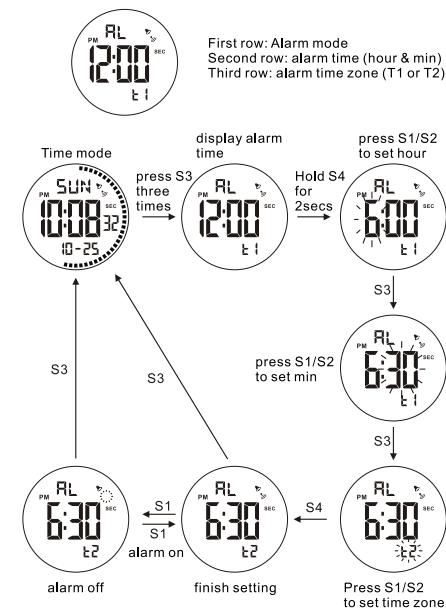
Countdown Timer Mode

How to use countdown timer

First row: Timer mode
Second row: countdown timer value
Third row: current time (hour & min)
60 animation dots: current second

Time mode — countdown timer mode — Press S1/S2 to set second — Hold S4 for 2secs — pause countdown — press S1/S2 to set min — press S1/S2 to set hour — back to the start time of countdown — finish setting — start countdown

maximum of countdown timer is 23 hours 59mins and 59secs

Daily Alarm Mode

How to set daily alarm

First row: Alarm mode
Second row: alarm time (hour & min)
Third row: alarm time zone (T1 or T2)

Time mode — press S3 three times — display alarm time — Hold S4 for 2secs — press S1/S2 to set hour — press S1/S2 to set min — press S1/S2 to set time zone — Press S1/S2 to set time zone — alarm off — finish setting — alarm on
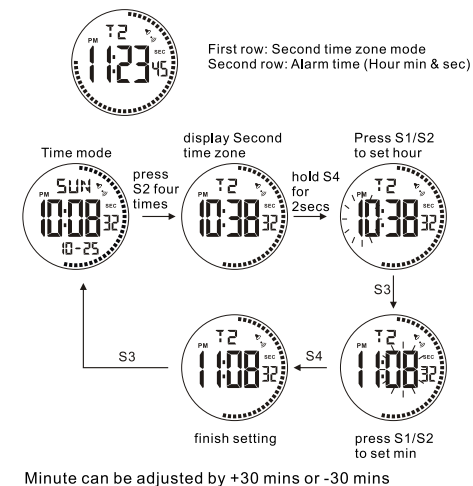
Alarm will only ring in either one time zone (T1/T2)

Second Time Zone Mode

How to set the second time zone

First row: Second time zone mode
Second row: Alarm time (Hour min & sec)

Time mode — press S2 four times — display Second time zone — hold S4 for 2secs — Press S1/S2 to set hour — press S1/S2 to set min — finish setting

Minute can be adjusted by +30 mins or -30 mins