


PASOS A SEGUIR / STEPS TO FOLLOW

- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Abrir armis. 2. Extraer pasador de un eslabón, utilizando el útil 25103 provisto de una clavija 25101 de 0,70 ó 0,90 mm. en función del diámetro del pasador siguiendo el sentido de la flecha del armis. 3. Sacar pasador del otro eslabón. Del mismo modo que el punto 2. 4. Retirar eslabón o eslabones sobrantes. 5. Unir eslabones. 6. Introducir el pasador por el extremo B en sentido contrario a la flecha. Presionar con el accesorio 25102 hasta que no sobresalga. | <ol style="list-style-type: none"> 1. Open the band 2. Remove the pin of the link, using the tool 25103 equipped with a prong 25101 of 0,70 or 0,90 mm. (depending on the diameter of the pin) following the direction of the arrow of the band. 3. Remove the pin from the other link. Like step nº2. 4. Remove the link or links leftover. 5. Join up the links. 6. Introduce the pin by the end B in the opposite direction of the arrow. Press with the accessory 25102 until it does not protrude. |
|--|---|

B



Extraer pasador
Remove the pin

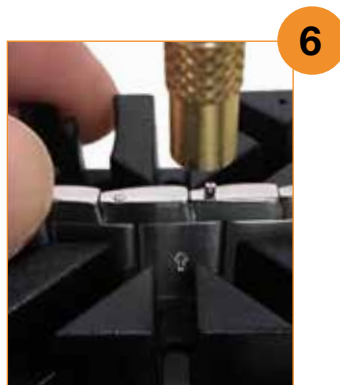

Colocar pasador
Introduce the pin



HERRAMIENTAS / TOOLS TO USE



2-5103-0-0



2-5101-0-70



2-5101-0-90



2-5102-0-0



2-4438-0-0